INSTALLATION INSTRUCTIONS

MULTIPORT MANIFOLD

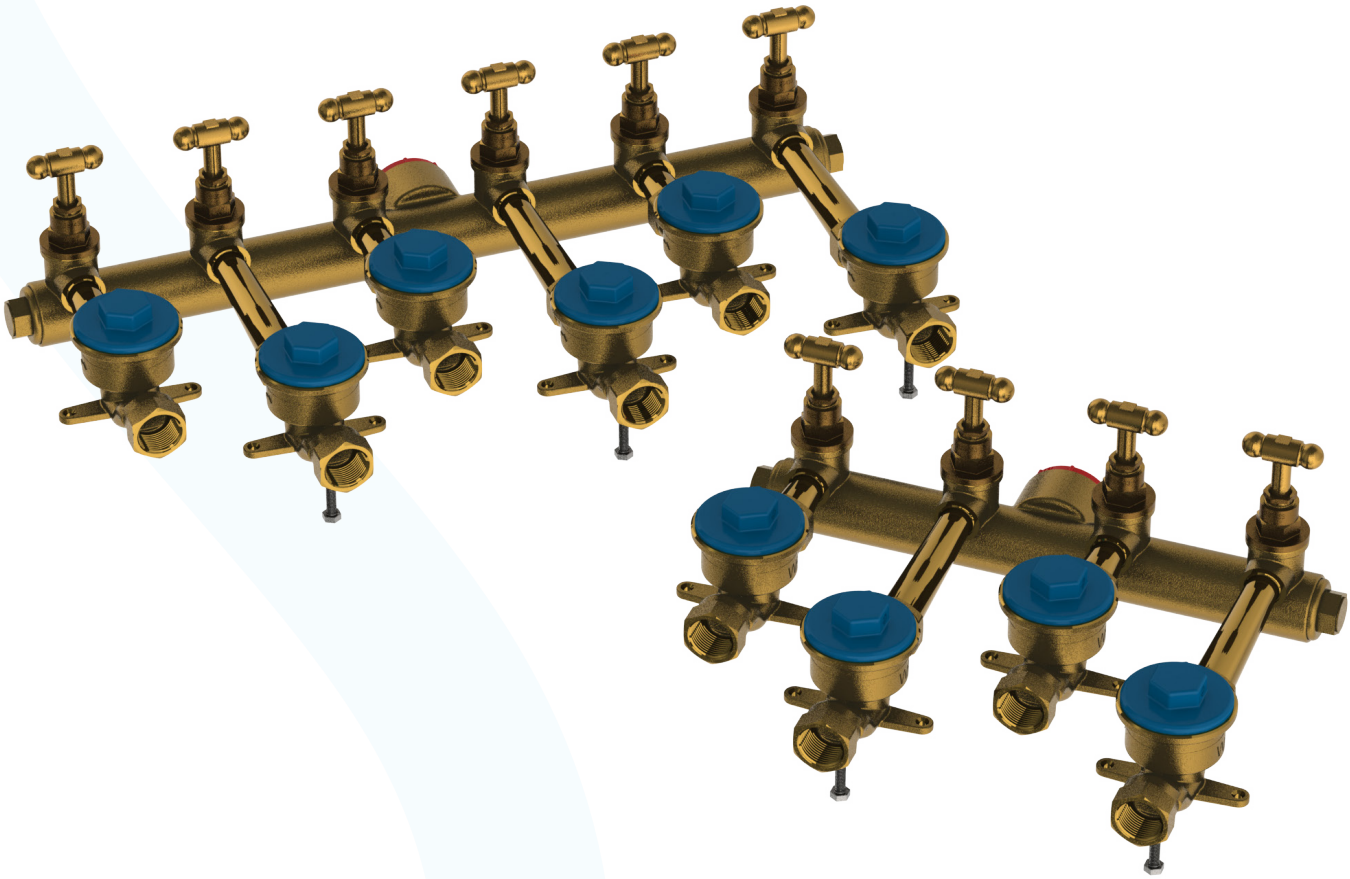

EQUIPMENT REQUIRED

Multiport Manifold

Optional:
Water meters
Adaptors
Chamber Sections

SAFETY FIRST

Personal Protective Equipment Must Be Worn

STEP 1

Remove dust caps from inlet and each individual outlet.

Screw desired adaptor into the inlet.

Note: Must be 1.1/2" male threaded adaptor. Please refer to adaptor manufacturer's installation instructions.

Connect service pipe to the adaptor.

STEP 2

Screw desired adaptor into each the first outlet.

Note: Must be 3/4" male threaded adaptors. Please refer to adaptor manufacturer's installation instructions.

Connect relevant service pipe to the adaptor.

STEP 3

Repeat Step 2 for each remaining outlet.

STEP 4

If installing meter:

Remove manifold cap and insert water meter for each required connection.

Note: Please refer to manufacturers installation instructions.

If installing in chamber sections:

Note: Please refer to manufacturers installation instructions.

PLEASE NOTE...

Adaptors — All adaptors must be fitted to the manufacturers requirements

Water Meter — All water meters must be fitted to the manufacturers requirements.

Chamber Sections — All chamber sections must be fitted to the manufacturers requirements.

Installation Depth — If installed underground, the WRAS Water Regulations Guide requires water pipes to be installed to a minimum of 750mm underground but no more than 1,350mm. If it is not possible to install to 750mm, adequate insulation should be used.

DSWF23-11

t +44 (0)121 520 7987 | **e** enquiries@waterfit.co.uk | **w** www.waterfit.co.uk