


INSTALLATION INSTRUCTIONS

PUSHFIT STOPCOCK

waterfit

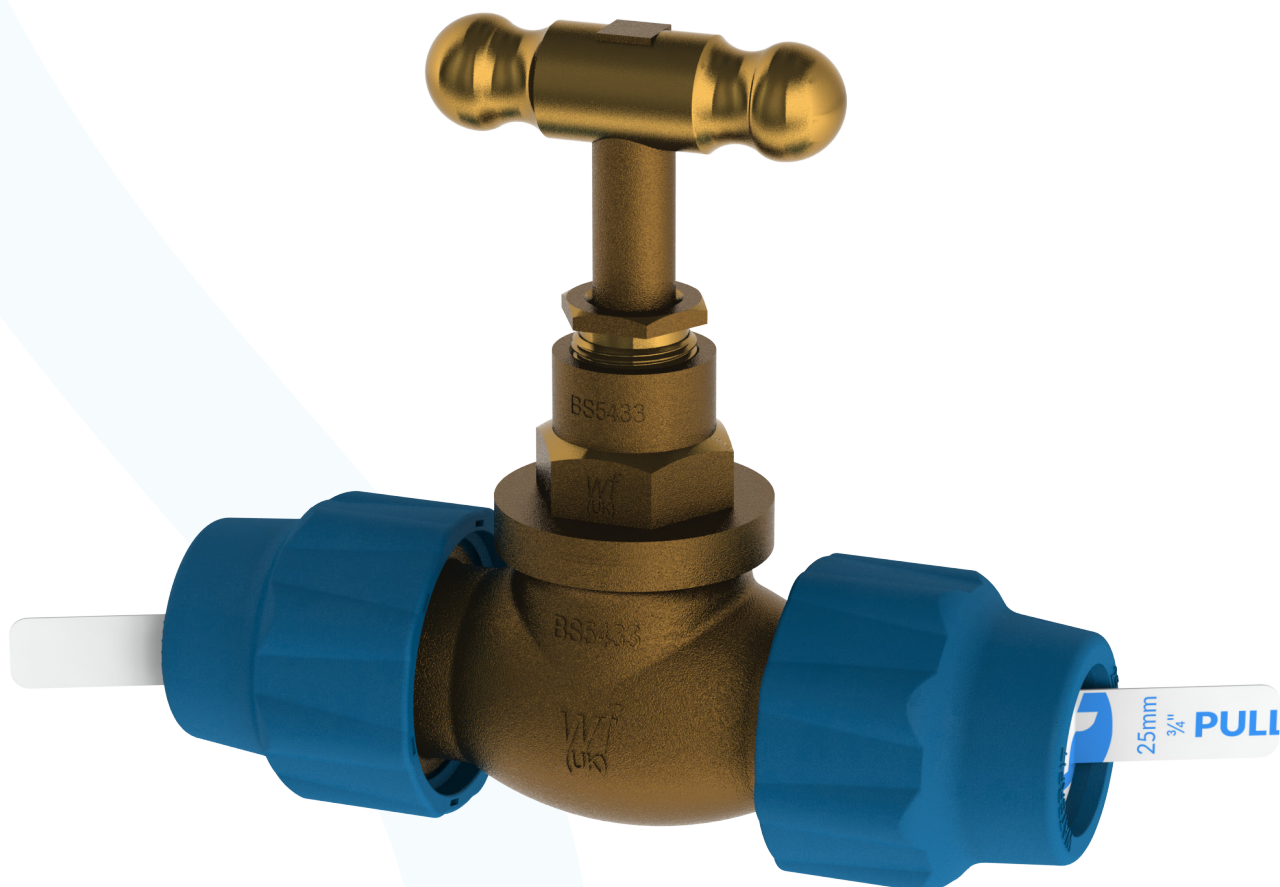

EQUIPMENT REQUIRED

Pushfit Stopcock - 25mm, or 32mm

SAFETY FIRST

Personal Protective Equipment Must Be Worn



STEP 1

Ensure stopcock is in the closed/down position prior to beginning installation.

Prepare the stopcock by removing the pull tabs, being careful not to lose the pipe liners.



STEP 2

Cleanly cut the pipe and insert the pipe liner.

Mark a guide on the pipe around 4.3cm for 25mm and 5.8cm for 32mm from the base of the liner.

Note: this is how far the pipe needs to be pushed into the stopcock for proper installation.



STEP 3


Push the pipe inside the blue cap up to the previously marked point.

*Note: this is not a compression fitting, **do not loosen the blue cap.***



STEP 4

Repeat Steps 2 & 3 on the opposite side of the stopcock, ensuring the pipe is fully engaged.

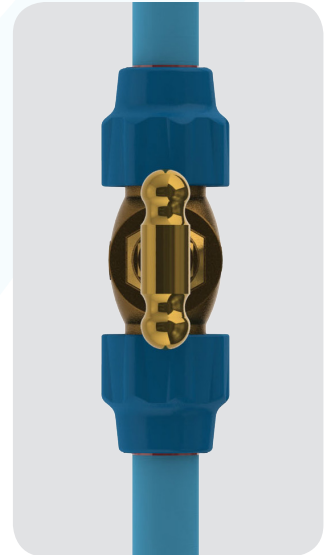

STEP 5

Slowly open the stopcock by turning the head anti-clockwise.

Installation is complete.



PLEASE NOTE...

Pushfit — The connections are pushfit not compression, so tightening the pushfit housing over 6Nm will not improve the seal but may damage the fittings.